

CAN-UDP

Datasheet

Email: yacer@yacer.cn **Web:** www.yacer.com.cn





Foreword

Notational Conventions

The following categorized signal words with defined meaning might appear in the manual.

Signal Words	Meaning
DANGER	Indicates a high potential hazard which, if not avoided, will result in death or serious injury.
CAUTION	Indicates a potential risk which, if not avoided, could result in property damage, data loss, lower performance, or unpredictable result.
ANTISTATIC	Indicates static sensitive equipment.
DANGER! ELECTRIC SHOCK	Indicates High voltage danger.
OTIPS	Provides methods to help you solve a problem or save you time.
NOTE	Provides additional information as the emphasis and supplement to the text.



Table of Contents

Foreword	
1 Overview	3
1.1 Introduction	
1.2 Features	3
1.3 Applications	3
1.4 Order Information	3
1.5 Technical Specifications	4
1.6 Mechanical Dimension Drawing	5
2 Hardware and Physical Interface	6
2.1 Appearance	6
2.2 LED Indicators	6
2.3 X1: 1x10 2.0mm pitch connector	6
2.4 X2: 1x10 2.0mm pitch connector	7



1 Overview

1.1 Introduction

The Yacer CAN-UDP micro embedded communication module provides one CAN bus interface, 100M Ethernet PHY interface, and one UART extended interface. Realize the protocol conversion between CAN, Ethernet and serial port.

30 x 35 mm small size, 2.0 mm pin connector. + 3.3V power supply, low power consumption. Industrial wide temperature, suitable for embedded applications.



1.2 Features

- One CAN bus interface;
- One 10/100M Ethernet PHY;
- One UART extended serial port;
- + 3.3V power supply, Low power consumption;
- Small size, Industrial wide temperature.

1.3 Applications

- Conversion between CAN and Ethernet;
- Conversion between CAN and UART serial port;
- Embedded application and development.

1.4 Order Information

Model	CAN bus interface	Ethernet interface	Extended interface
CAN-UDP-200	1 x CAN	1 x 10/100M PHY	1 x UART




1.5 Technical Specifications

Item	Parameters	Details
	Level standard	3.3V LVCMOS
CAN Interface	Working Mode	CAN 2.0A, CAN2.0B, ISO 11898
	Baud rate	≤ 1 Mbps
	Number	1 x 100M PHY
Ethernet Interface	Rate	100M Full-duplex
	Protocol	UDP
	Level standard	3.3V LVCMOS
UART Interface	Duplex mode	Full-duplex, Half-duplex
	Baud rate	≤ 921.6 Kbps
Power	Input voltage	+3.3 VDC
Requirements	Power consumption	< 1 W
	Connector	2.0 mm pin connector
Mechanical Characteristics	Dimensions	30 mm x 35 mm
	Weight	< 15g
	Operating temperature	-40 ~ +85℃
Operating Environment	Storage temperature	-40 ~ +85℃
	Operating humidity	5 ~ 95% RH (no condensation)



1.6 Mechanical Dimension Drawing

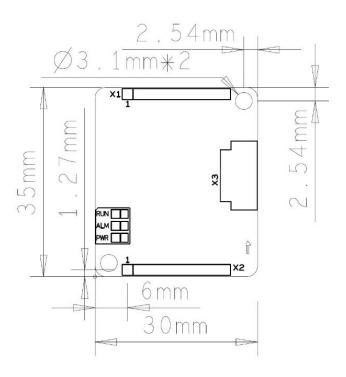




2 Hardware and Physical Interface

2.1 Appearance

The positive and negative sides of the module are as follows, and the signal is drawn through pin X1, X2.

X3 is the configuration interface, connect the DMS-UART-8P configuration cable, and configure online through the management computer's USB interface.

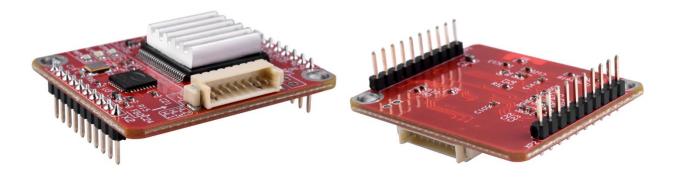

2.2 LED Indicators

LED	Description		
RUN	Running indicator, green light flashes during normal operation		
	Alarm indicator		
	Initialization phase blinking: waiting for the host computer configuration		
ALM	command		
	Normal operation status off: the device is working normally		
	Normal operation status on: device failure		
PWR	Power indicator, always on after power on		

2.3 X1: 1x10 2.0mm pitch connector

Pin	Signal	Direction	Description
1	VCC3V3	1	Power input, +3.3 VDC
2 RESET_IN	DECET IN	1	Module reset input, active low. Module has POR
	 	function, pins can be suspended	
3	NC		Standby, must be left suspended
4	UART_TxD	0	Serial data transmit
5	UART_RxD	I	Serial data receive
6	UART_TX_EN	0	Serial port transmit enable, enable level is high,



Pin	Signal	Direction	Description
			for half duplex
7	AUX_UART_TxD	0	Standby serial data transmit
8	AUX_UART_RxD	I	Standby serial data receive
0	9 AUX_UART_TX_EN	AUX UART TX FN O	Standby serial port transmit enable, enable level
9		O	is high, for half duplex
10	GND		Signal ground

2.4 X2: 1x10 2.0mm pitch connector

Pin	Signal	Direction	Description
1	GND		Signal ground
2	CAN_RX	1	Optional CAN interface data receive
3	CAN_TX	0	Optional CAN interface data transmit
4	NC		Standby, must be left suspended
5	ETH_LED	0	Ethernet Link/Act indication, drive LED positive
6	ETH_TX+		Ethernet PHY interface Tx+, external network
0			transformer required
7	CTU TV		Ethernet PHY interface Tx-, external network
'	ETH_TX-		transformer required
8	ETU DV±		Ethernet PHY interface Rx+, external network
8 ETH_RX+	EIII_KAT		transformer required
9	ETU DV		Ethernet PHY interface Rx-, external network
9	ETH_RX-		transformer required
10	GND		Signal ground



About the Manual

- The manual is for reference only. If there is inconsistency between the manual and the actual product, the actual product shall prevail.
- We are not liable for any loss caused by the operations that do not comply with the manual.
- All the designs and software are subject to change without prior written notice. The product updates might cause some differences between the actual product and the manual. Please contact the customer service for the latest program and supplementary documentation.
- There still might be deviation in technical data, functions and operations description, or errors in print. If there is any doubt or dispute, we reserve the right of final explanation.
- Upgrade the reader software or try other mainstream reader software if the manual (in PDF format) cannot be opened.
- Please visit our website, contact the supplier or customer service if there is any problem occurring when using the device.
- If there is any uncertainty or controversy, we reserve the right of final explanation.

Nanjing Yacer Technology Co.,Ltd. | Website: http://www.yacer.com.cn | Email: yacer@yacer.cn